




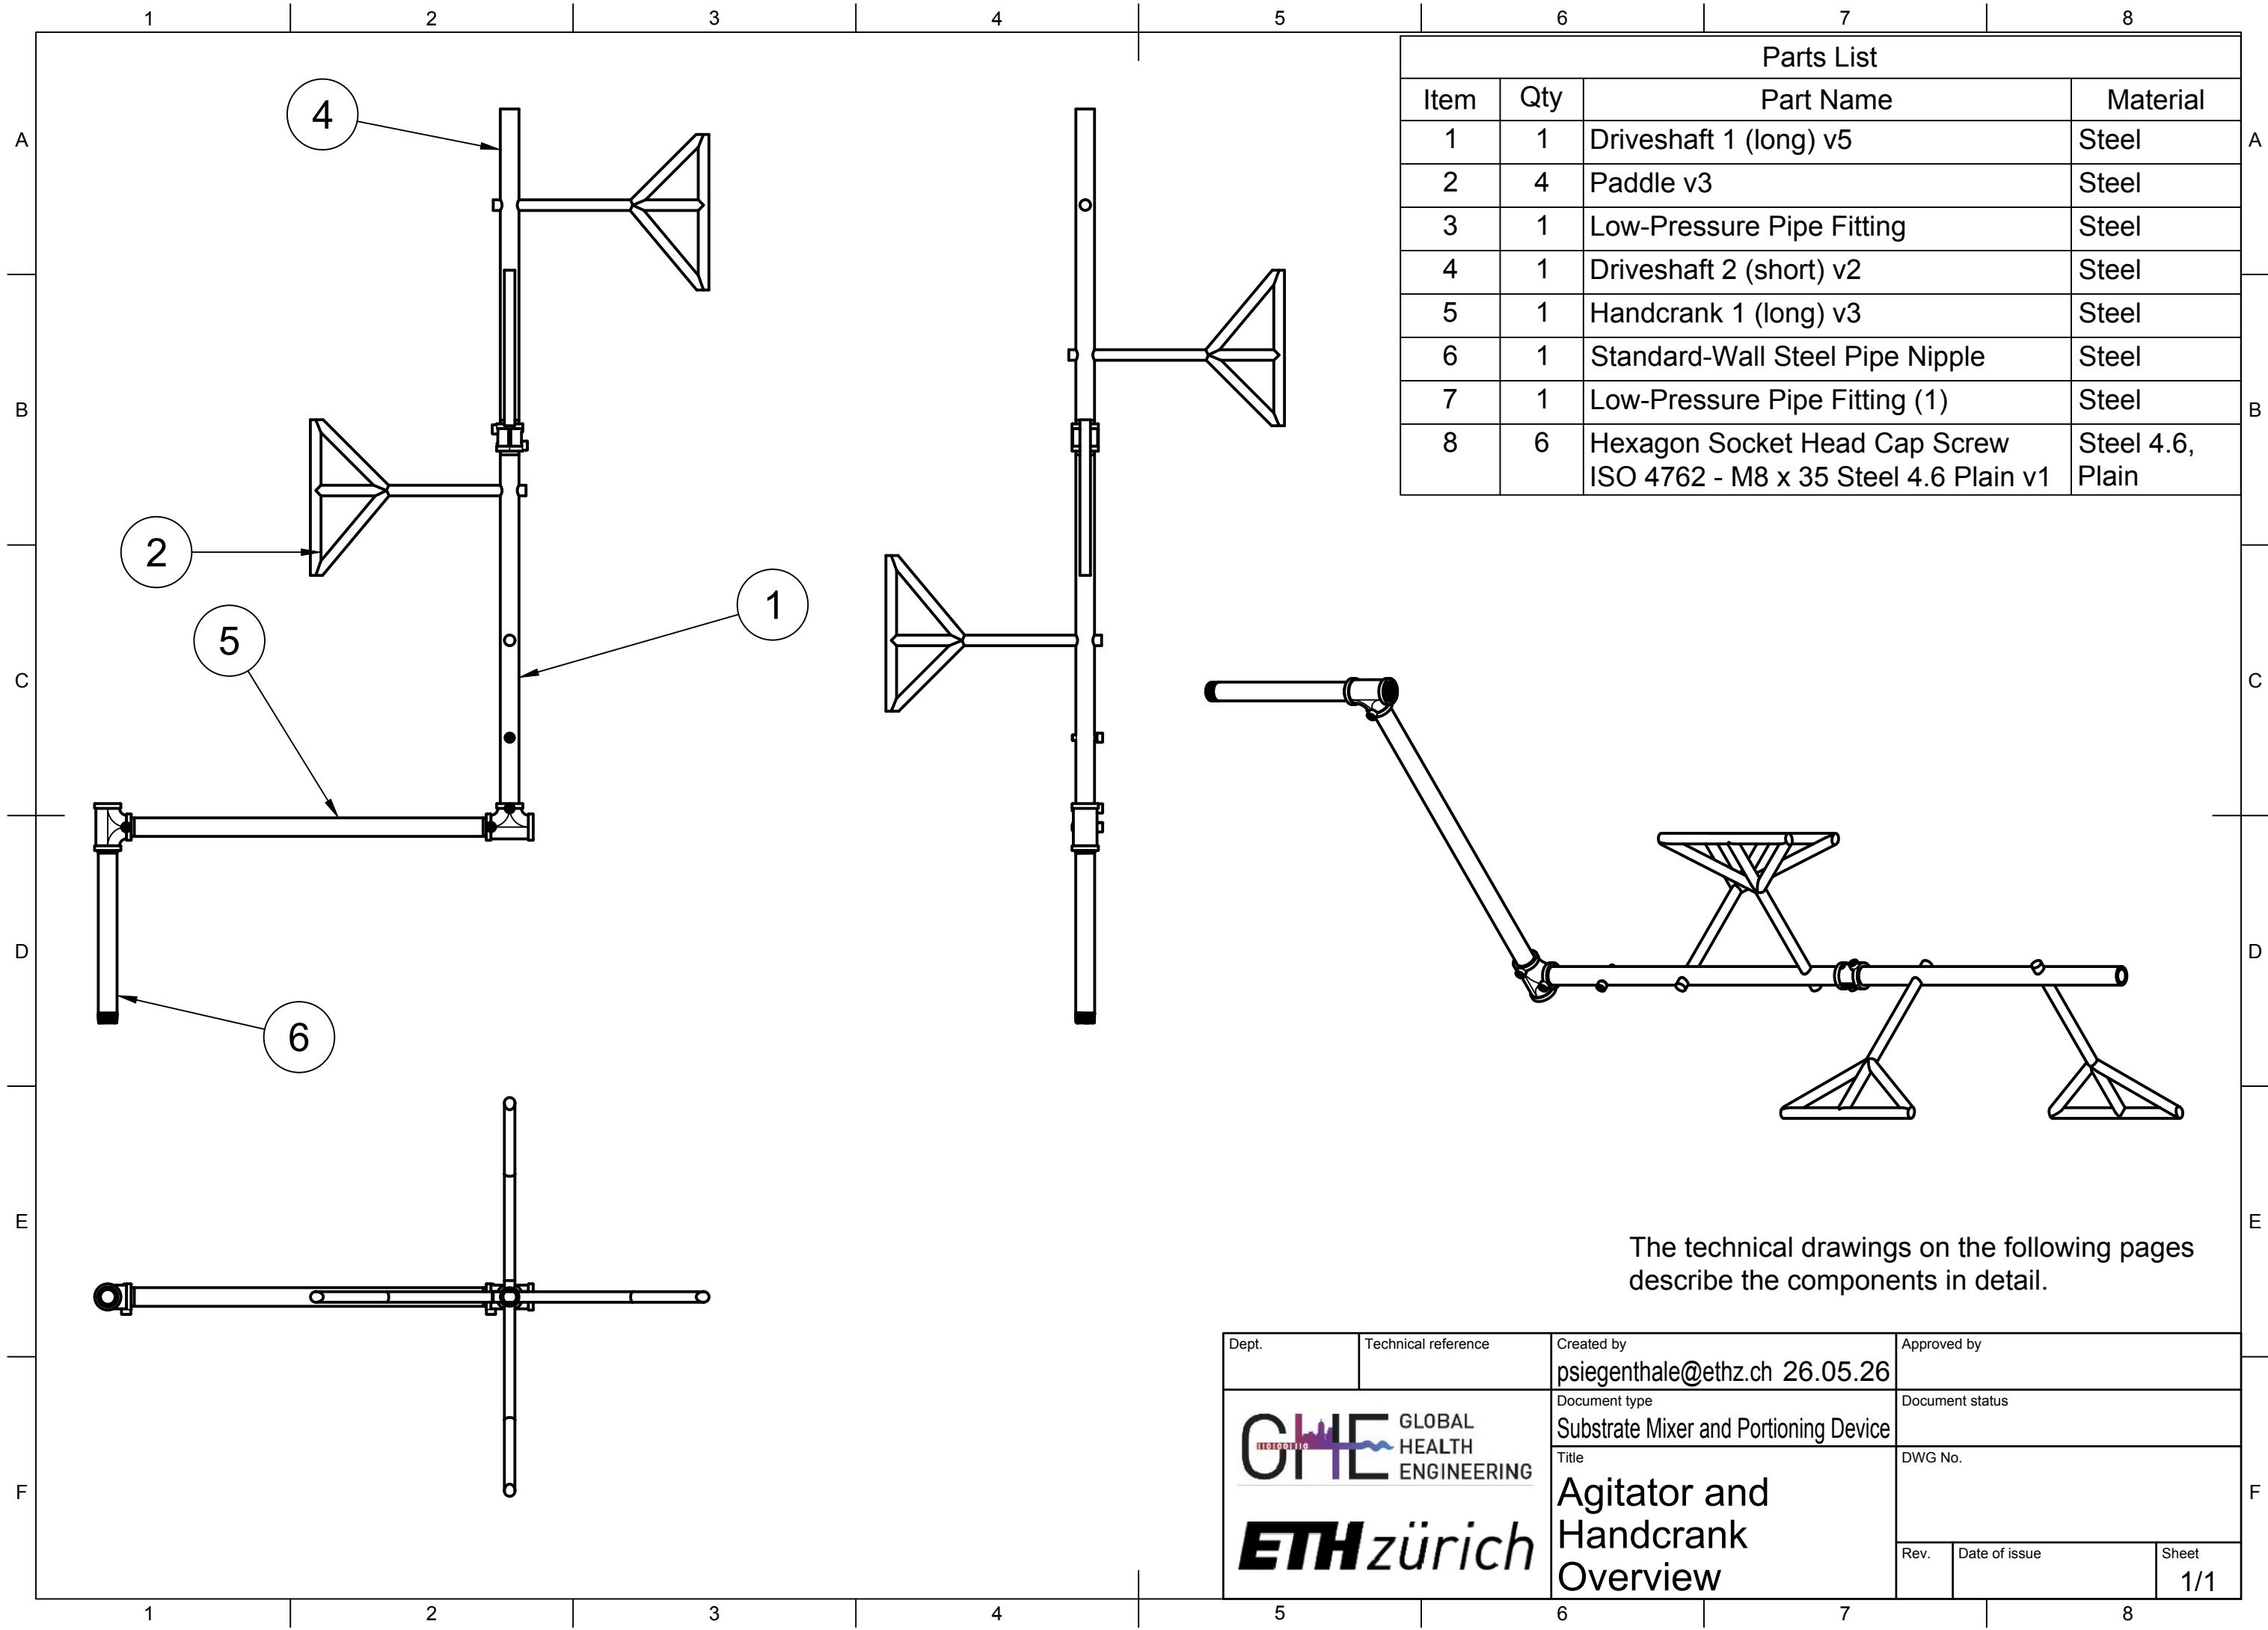

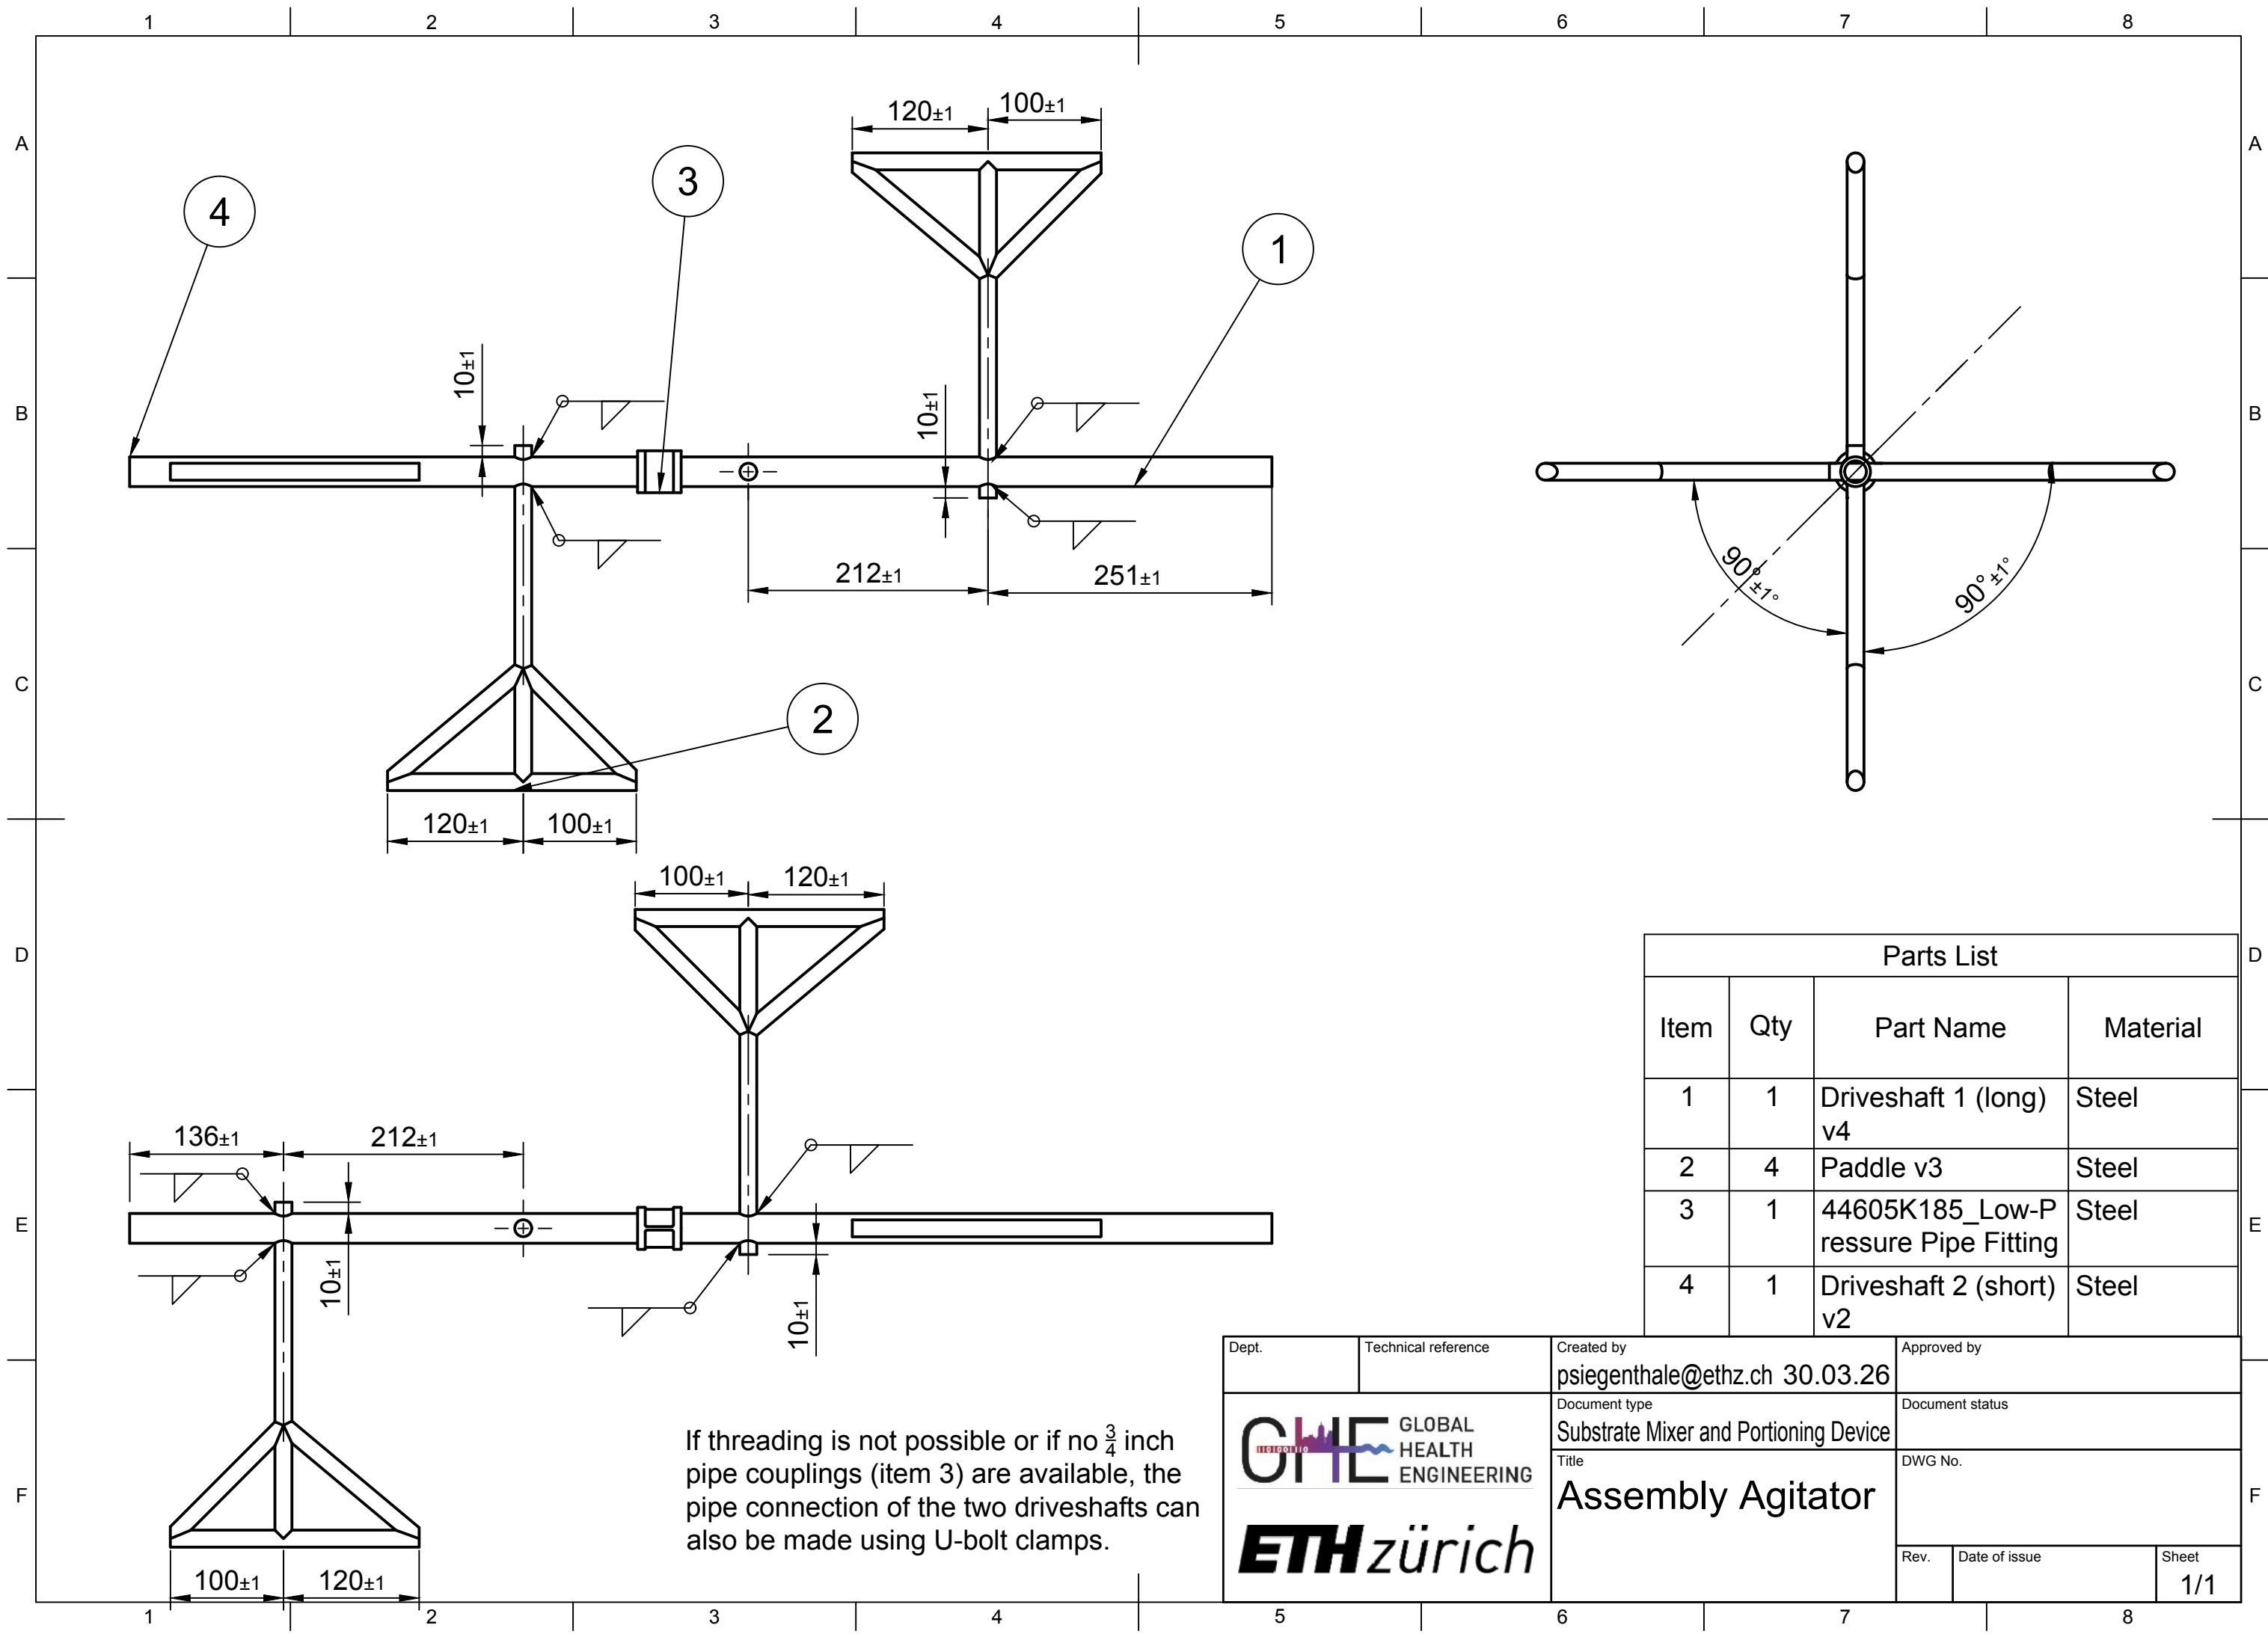

Dept.	Technical reference	Created by psiegenthale@ethz.ch 30.03.26	Approved by
 GLOBAL HEALTH ENGINEERING 		Document type Substrate Mixer and Portioning Device	Document status
		Title Assembly Agitator	DWG No.
		Rev.	Date of issue
		Sheet	1/1

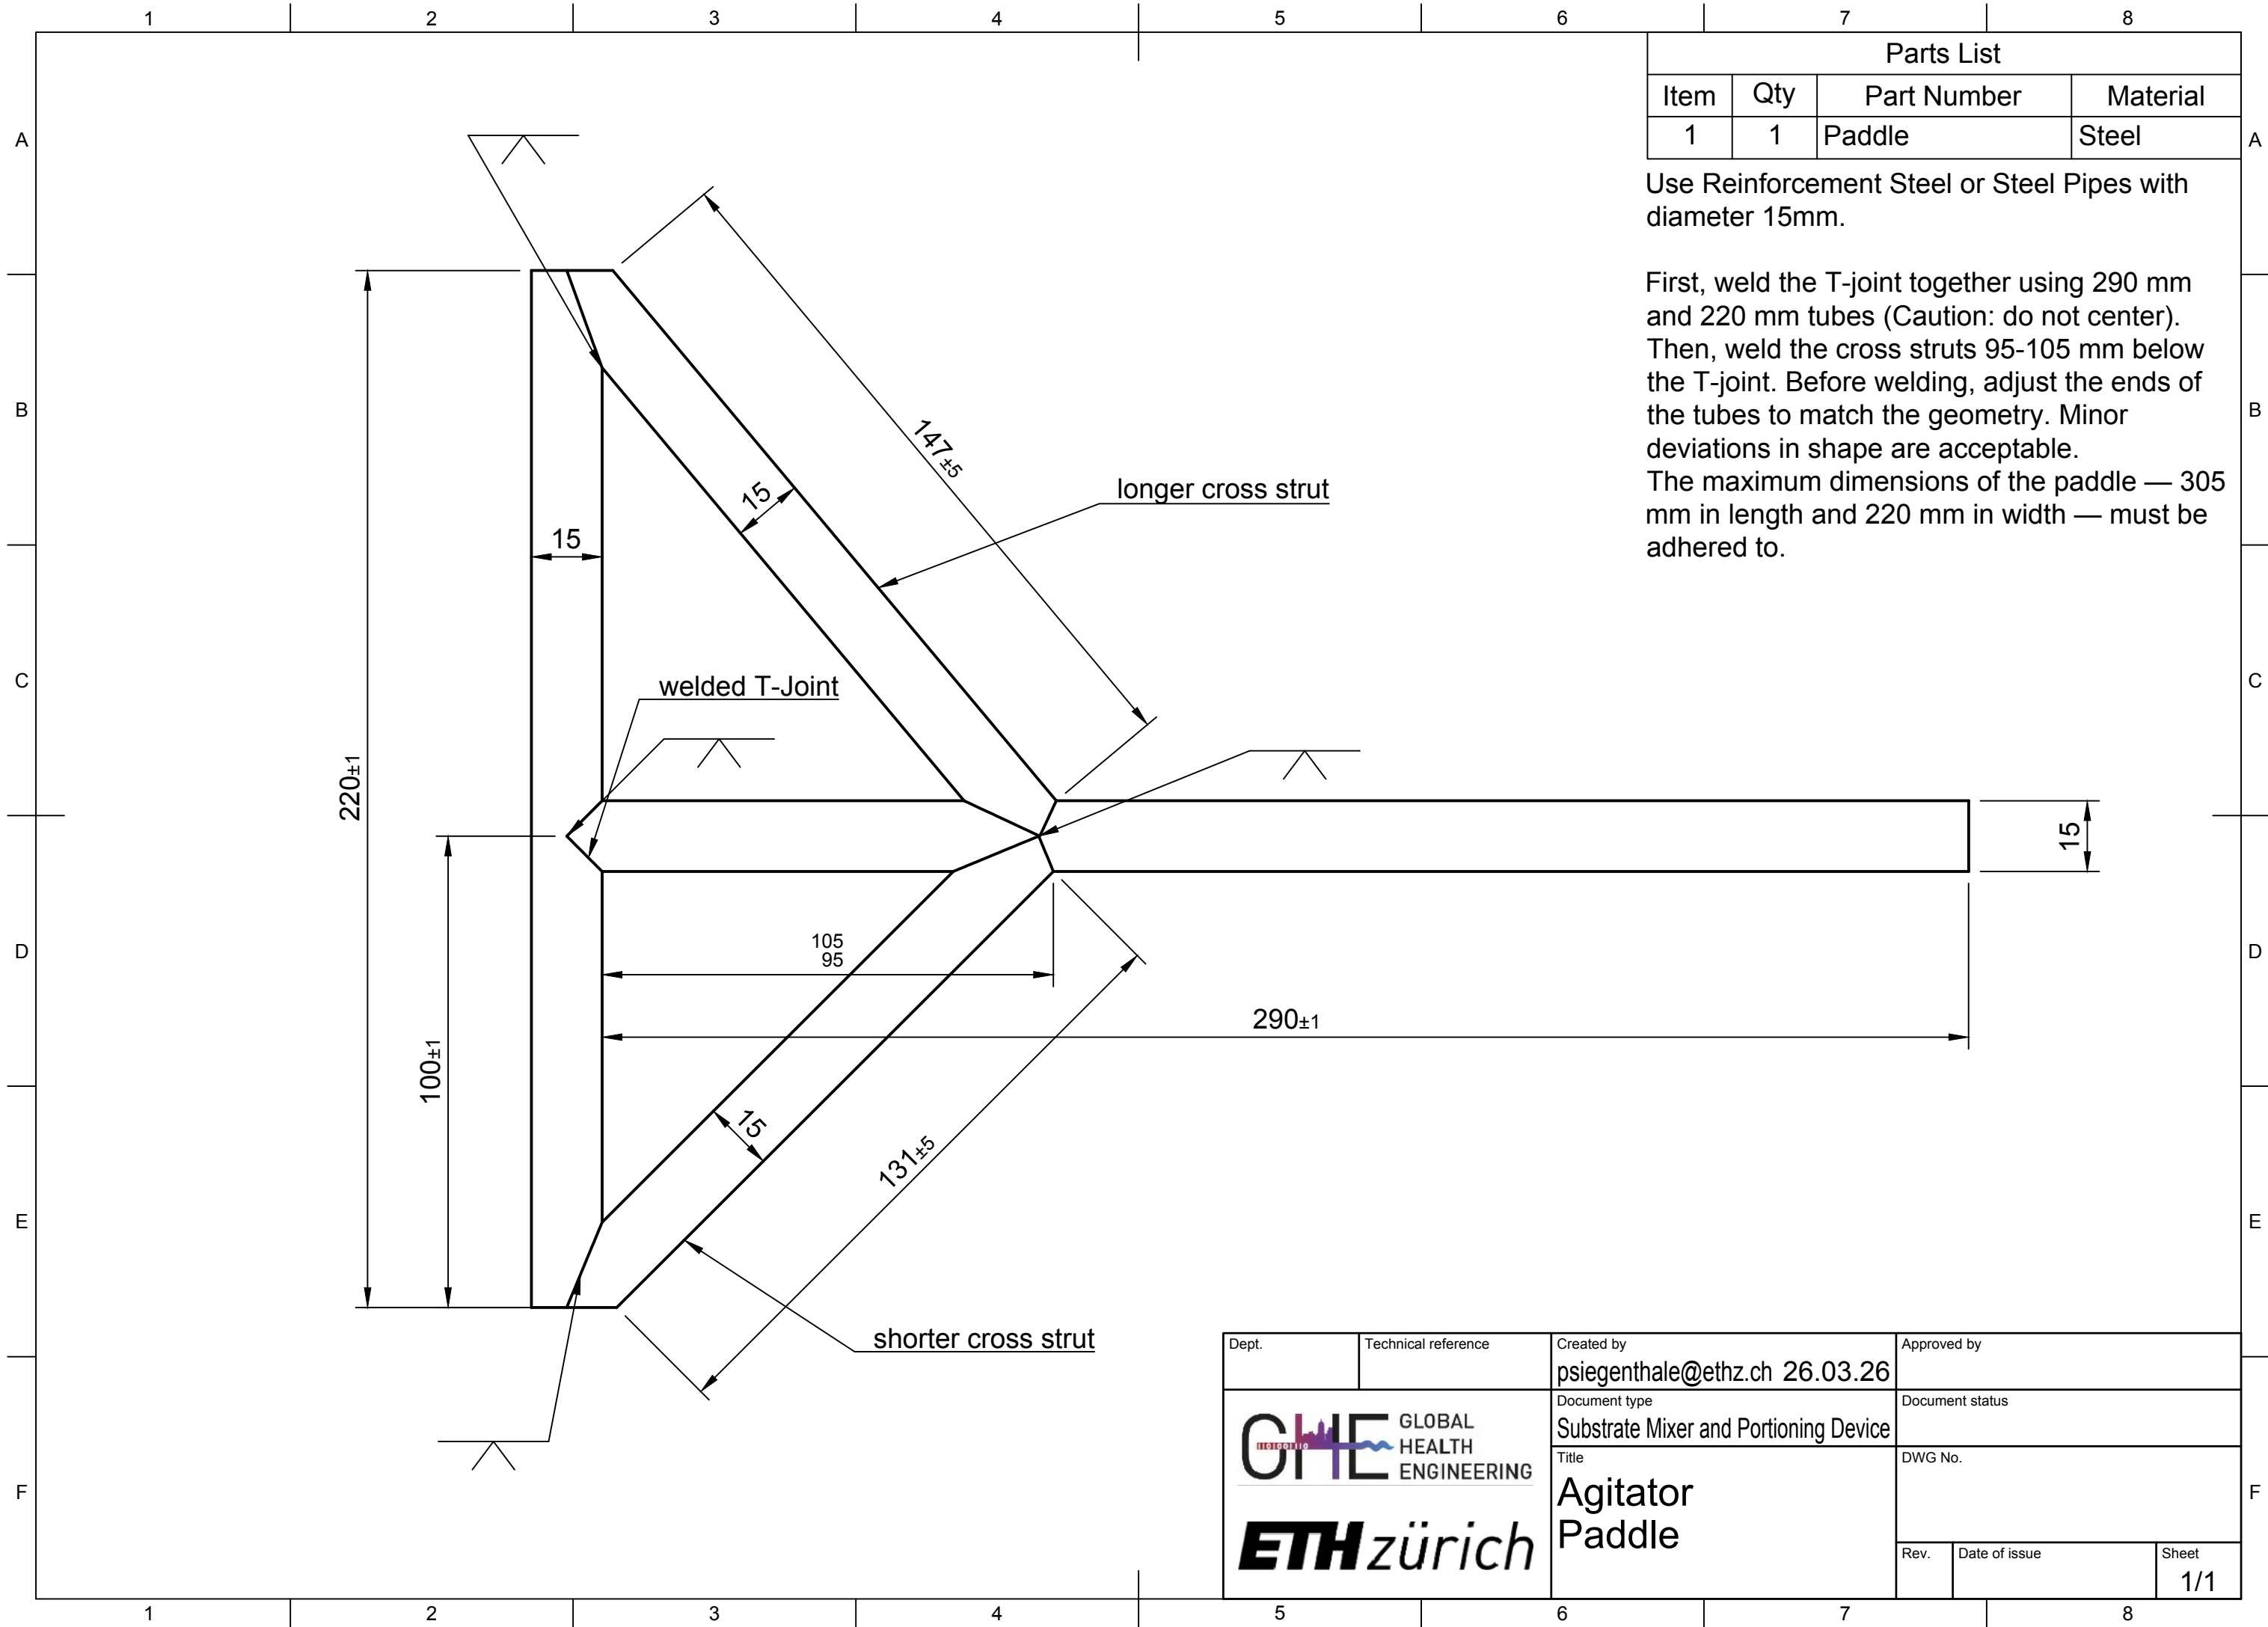


Parts List			
Item	Qty	Part Number	Material
1	1	Paddle	Steel


Use Reinforcement Steel or Steel Pipes with diameter 15mm.

First, weld the T-joint together using 290 mm and 220 mm tubes (Caution: do not center). Then, weld the cross struts 95-105 mm below the T-joint. Before welding, adjust the ends of the tubes to match the geometry. Minor deviations in shape are acceptable. The maximum dimensions of the paddle — 305 mm in length and 220 mm in width — must be adhered to.

Dept.	Technical reference	Created by psiegenthale@ethz.ch 26.03.26	Approved by
 GLOBAL HEALTH ENGINEERING ETH zürich		Document type Substrate Mixer and Portioning Device	Document status
		Title Agitator Paddle	DWG No.
		Rev.	Date of issue
		Sheet	1/1

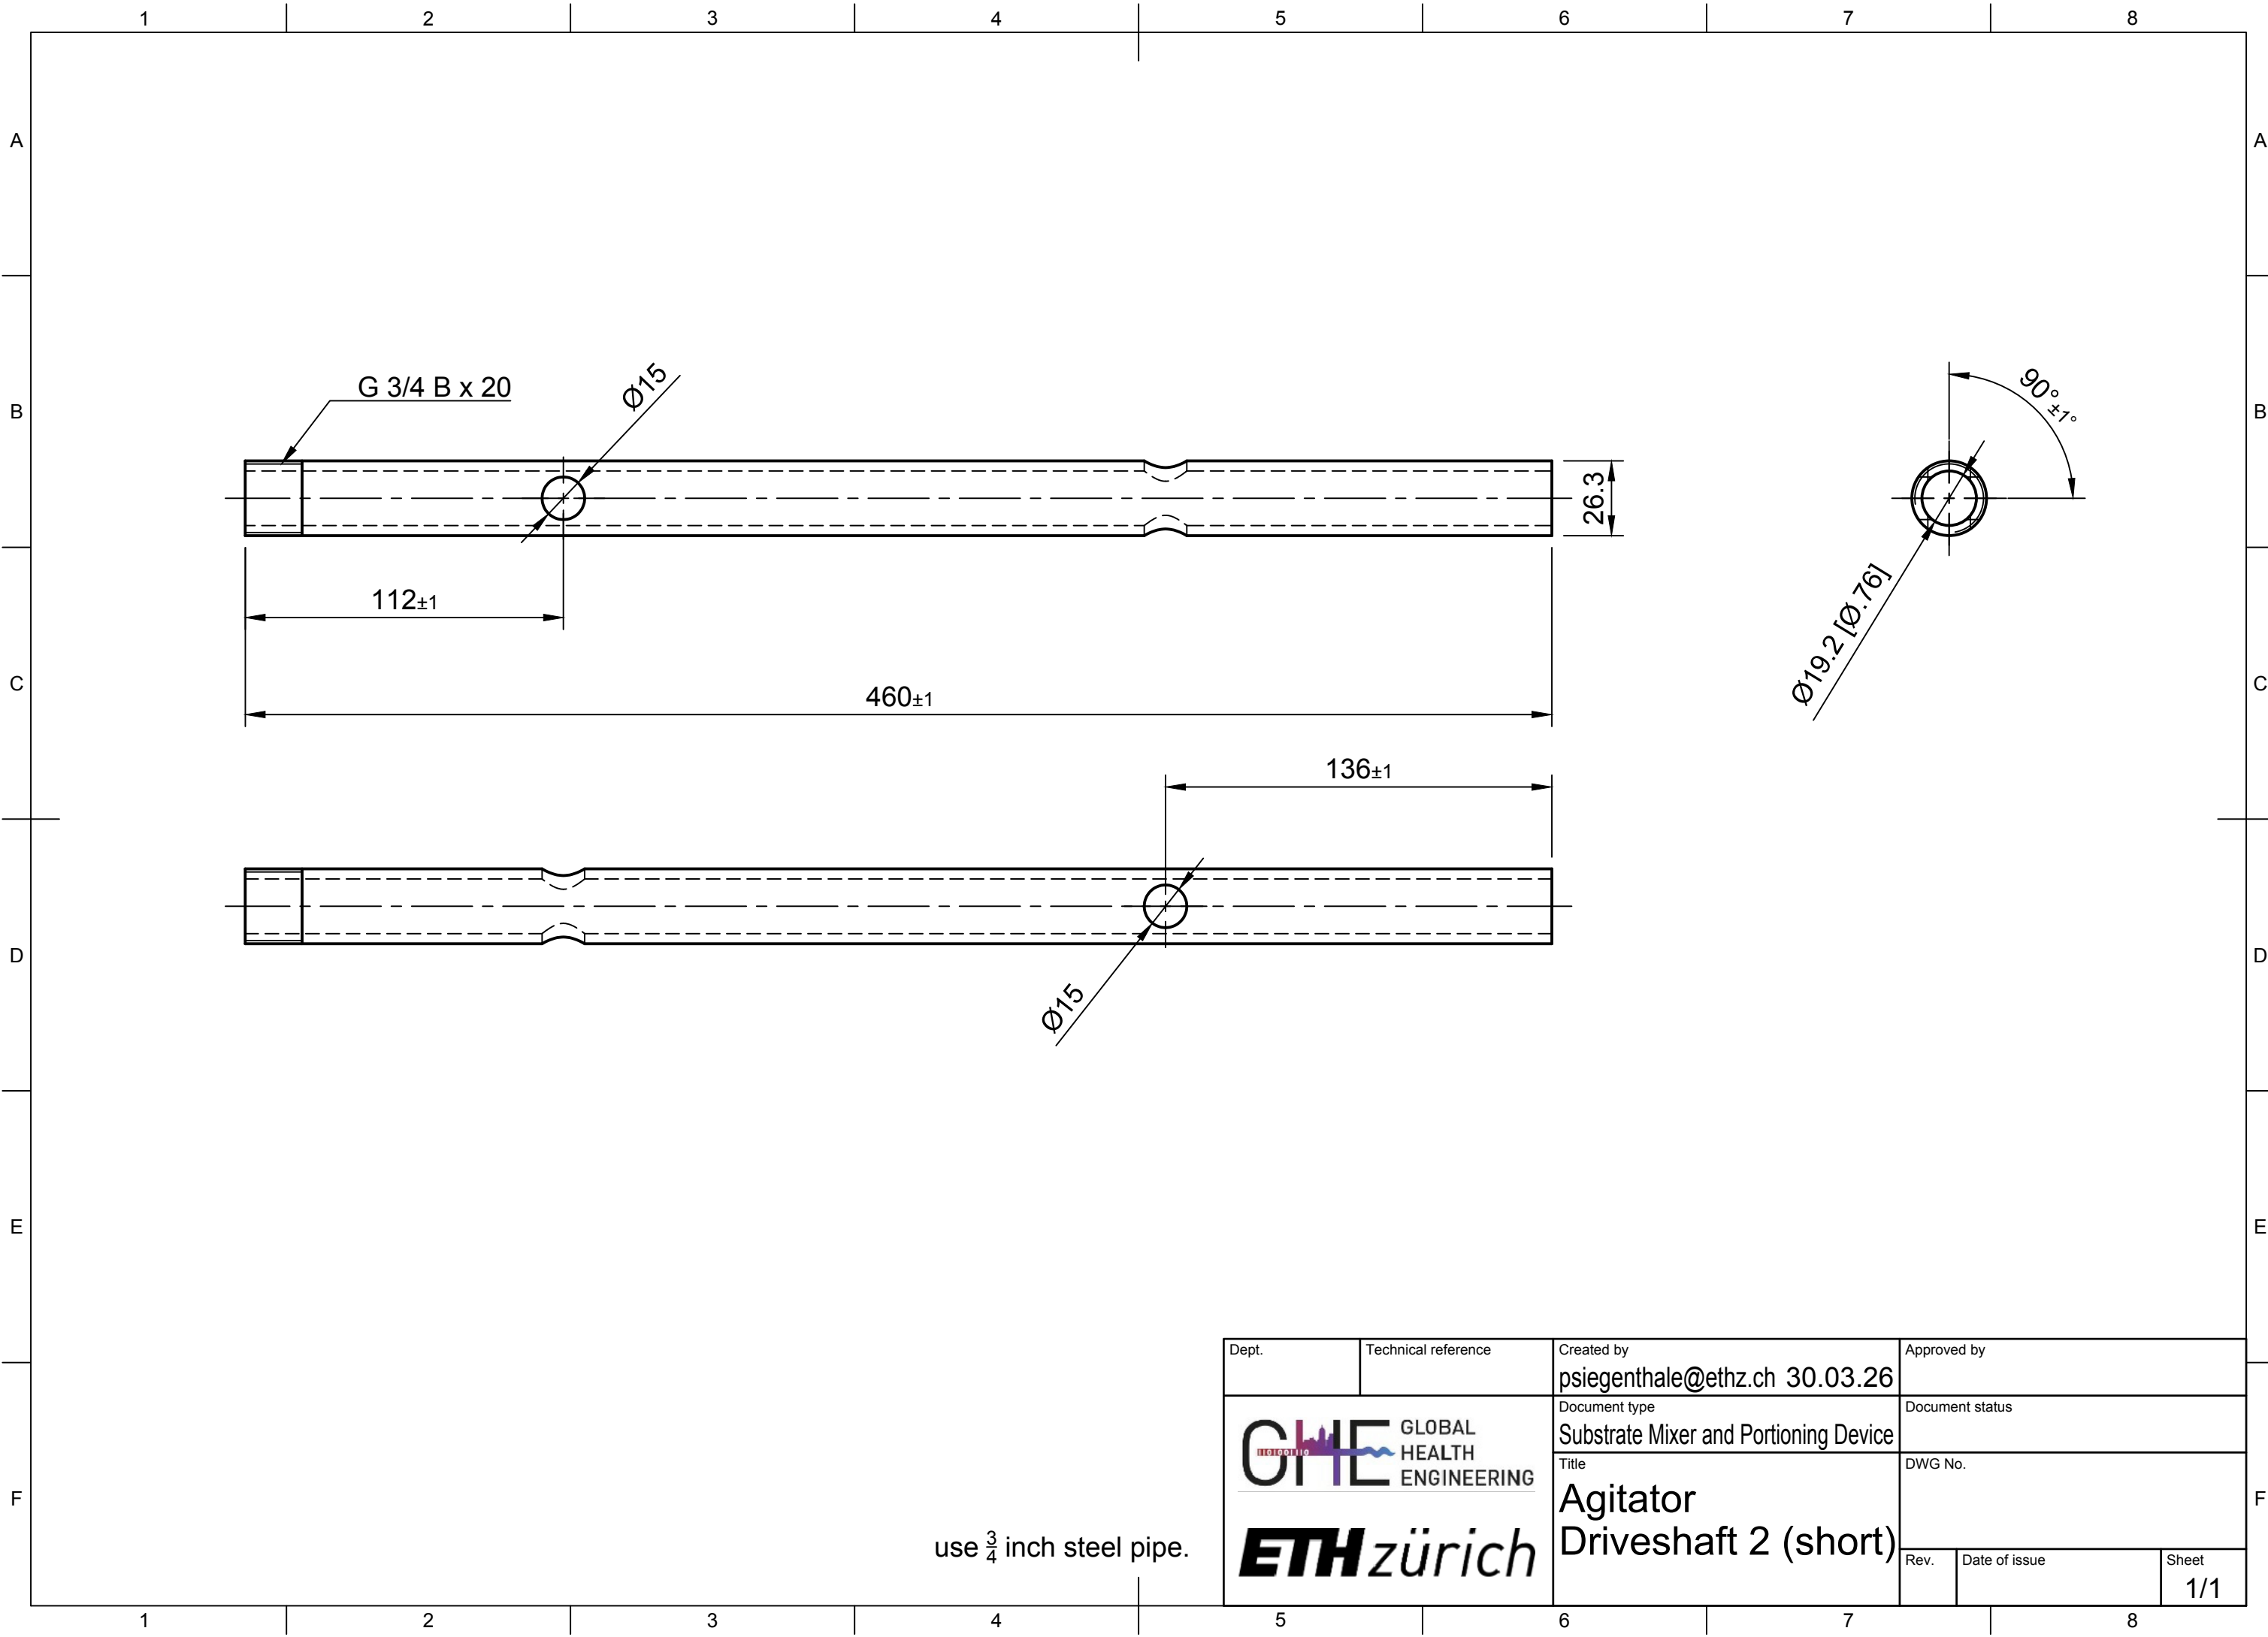

Dept.	Technical reference	Created by psiegenthale@ethz.ch 30.03.26	Approved by
 GLOBAL HEALTH ENGINEERING 	Document type Substrate Mixer and Portioning Device		Document status
	Title Agitator Driveshaft 2 (short)		DWG No.
	Rev.	Date of issue	Sheet 1/1

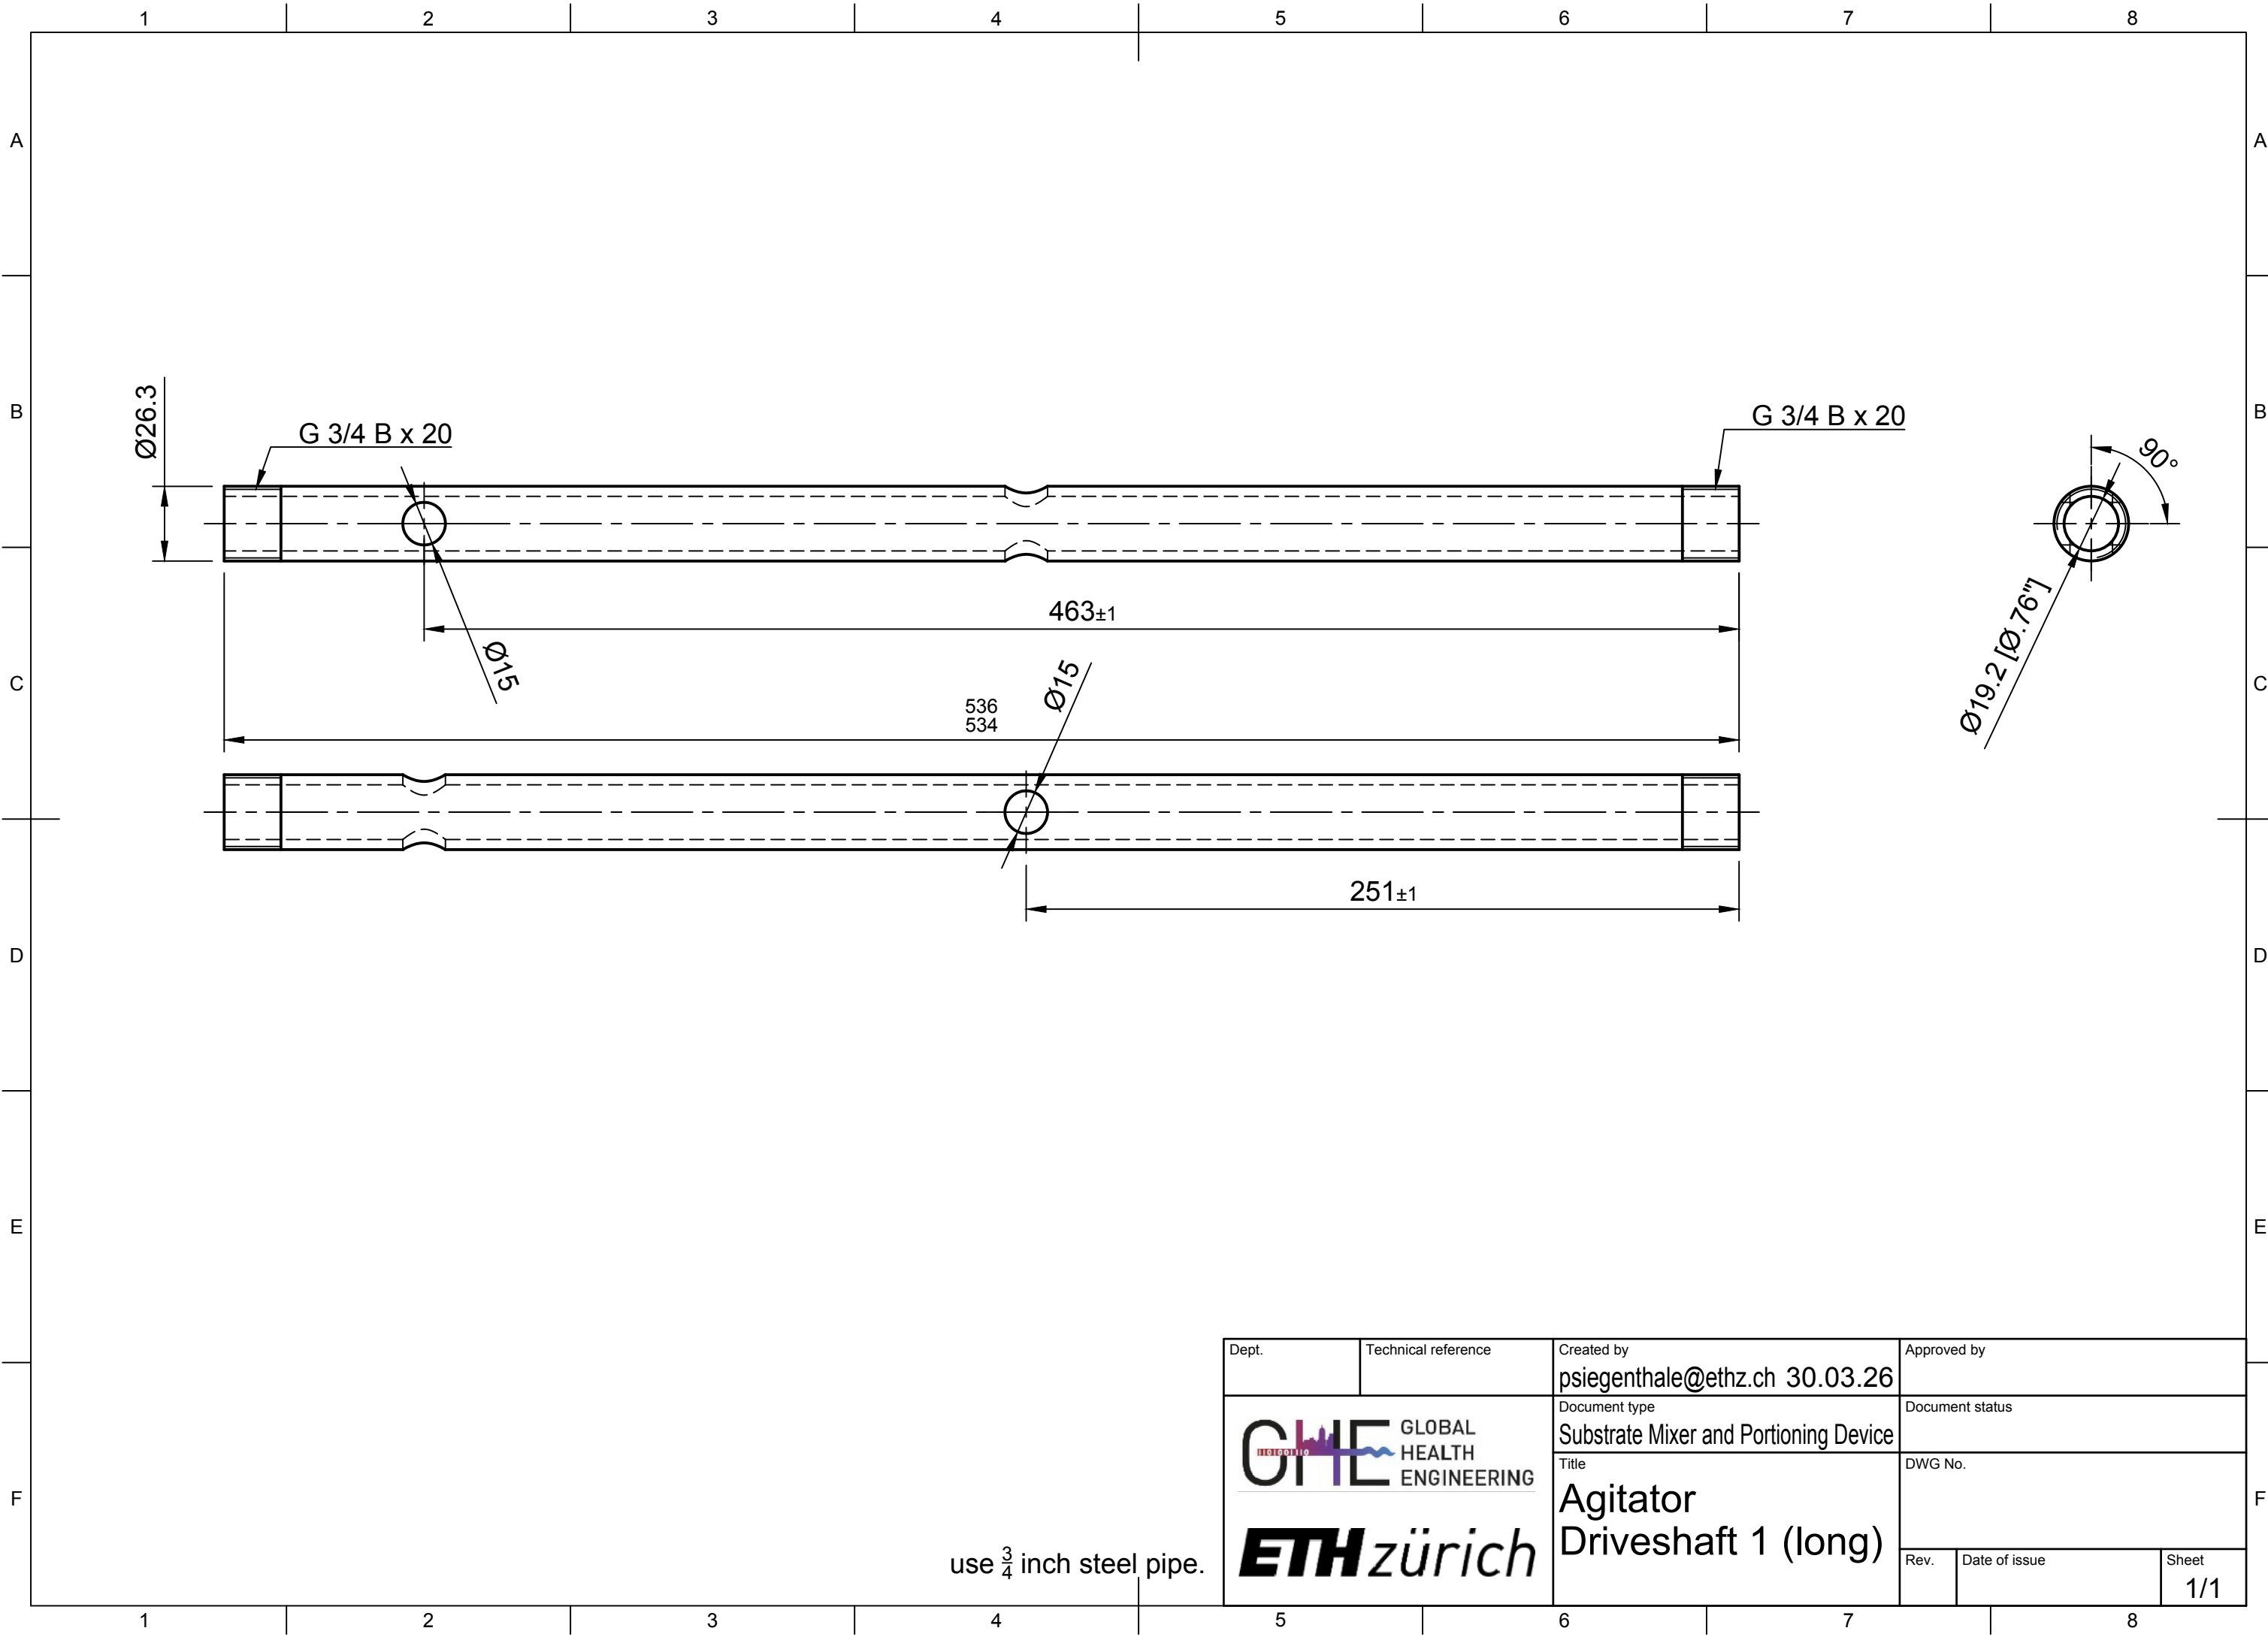

use $\frac{3}{4}$ inch steel pipe.

Dept.	Technical reference	Created by psiegenthale@ethz.ch 30.03.26	Approved by
 GLOBAL HEALTH ENGINEERING 		Document type Substrate Mixer and Portioning Device	Document status
		Title Agitator Driveshaft 1 (long)	DWG No.
Rev.	Date of issue	Sheet 1/1	

